

# VENUE 110V: Contents

<b>Preface</b> .....	<b>ix</b>
About This Course.....	ix
Prerequisites.....	ix
Course Objectives.....	x
Conventions and Symbols Used in This Book.....	x
Menu and Key Commands.....	x
Symbols and Icons.....	xi
VENUE Certification Preparation.....	xii
<b>Chapter 1. The VENUE Concept</b> .....	<b>1</b>
Introduction.....	3
What is VENUE?.....	3
The Product Line.....	3
The Design Goal.....	5
Analog vs. Digital Console Architecture.....	5
The Analog Console Legacy.....	5
Characteristics of Analog Consoles.....	5
Analog Console Signal Flow.....	6
The Digital Console Environment.....	6
Characteristics of Digital Consoles.....	6
Digital Console Signal Flow.....	7
The Big Difference.....	7
Benefits of Digital Consoles.....	7
The VENUE Advantage.....	8
VENUE Components.....	9
Control Computer and VENUE Software.....	10
Control Surface.....	10
D-Show Control Surface.....	11
Profile Control Surface.....	11
SC48 Control Surface.....	12
DSP Mix Engines.....	13
Input, Output, and Option Cards.....	13
D-Show and Profile Systems (Stage Rack & FOH Rack Combo).....	13
Mix Rack System.....	15
SC48 Remote System.....	16
SC48.....	17
Power Up/Power Down Procedure.....	17
Review/Discussion.....	19
<b>Chapter 2. VENUE Control Software</b> .....	<b>21</b>
Introduction to VENUE Software.....	23
Software Functions.....	23
VENUE Software in Standalone Mode.....	24

Overview of the VENUE Software User Interface .....	24
Inputs.....	24
Outputs.....	24
Filing .....	25
Snapshots .....	25
Patchbay .....	25
Plug-Ins.....	25
Options .....	25
System Configuration.....	26
VENUE Operating Modes .....	26
CONFIG Mode.....	26
SHOW Mode.....	26
Setting Up the System: The OPTIONS Page.....	27
The System Sub-Tab.....	28
Configuration Options.....	28
System Components.....	32
Setting up your Inputs & Outputs: The PATCHBAY Page .....	32
Navigating the Patchbay.....	34
Configuring Inputs .....	35
Routing Outputs .....	37
Stealing Inputs or Outputs in the Patchbay.....	38
Working with Input Strips: The INPUTS Page .....	39
Viewing Inputs.....	39
Combining Inputs to Make a Stereo Channel Strip .....	40
Assigning Inputs to Busses.....	41
Customizing Channel Layout.....	42
Using Busses .....	45
Assigning an Input Channel to an Aux Bus.....	45
Viewing Aux Output Channels .....	46
Assigning an Input Channel to a Group .....	47
Assigning Groups to Main Output Busses.....	48
Filing.....	48
Saving Your Work .....	49
Loading Shows .....	51
Transferring Files To/From Portable Storage .....	53
Review/Discussion .....	55
<b>Exercise 1. VENUE Software.....</b>	<b>57</b>
<b>Chapter 3. Control Surface Overview .....</b>	<b>65</b>
Introduction to the VENUE Control Surfaces .....	67
A Familiar Layout .....	67
Differences between D-Show, Profile, and SC48 .....	68
Control Surface Top Panel Layouts.....	69
Input Channel Controls and Encoders.....	71
Navigation, Selection, and Adjustment Controls .....	72
Channel Faders .....	73
Channel Strip Controls.....	74
Assignable Channel Section .....	79
Selecting and Targeting Channels.....	80
Bus Assigns Section .....	80
Selected Channel Section .....	81
Channel Control Section.....	82
Flex Channel (SC48 Only).....	88
Output Section .....	89
Output Fader Controls.....	89
Output Encoders and Display.....	90
Mains Fader .....	91
Master and Global Controls .....	91
Console Mode Section.....	92

Snapshots Section .....	92
Mute Groups/Function Switches.....	93
View Modes Section.....	94
Monitoring Section.....	94
Metering Section.....	95
Review/Discussion .....	96
<b>Exercise 2. Exploring the Surface .....</b>	<b>99</b>
<b>Chapter 4. Built-In Effects Processing .....</b>	<b>105</b>
Introduction.....	107
Dynamics Processing.....	107
Built-In Compressor/Limiter.....	108
Compressor/Limiter Features .....	108
Compressor/Limiter Parameters.....	108
Built-In Expander/Gate .....	109
Expander/Gate Features.....	109
Expander/Gate Parameters.....	110
Dynamics Settings and Presets.....	110
Copying and Pasting Settings .....	110
Using Presets for Built-In Dynamics.....	112
Standard EQ Processing .....	113
Controlling EQ for Inputs.....	114
HPF Controls.....	114
Parametric EQ Features.....	114
Analog and Digital EQ Modes .....	115
Parametric EQ Parameters .....	116
Resetting EQ Parameters.....	117
Controlling Graphic EQs .....	118
On-Screen Graphic EQ Controls.....	118
Inserting Graphics EQs on Outputs.....	119
Control Surface Graphic EQ Controls.....	119
Resetting Graphic EQ Parameters.....	121
EQ Settings and Presets .....	121
Copying and Pasting EQ Settings.....	121
Using Presets for Built-In EQs, Plug-Ins, and Graphic EQs.....	123
Signal Routing through On-Board Processing .....	124
Changing Dynamics and EQ Processing Order.....	124
Bypassing Effects with Input Direct .....	125
Using Multi-Select.....	125
Review/Discussion .....	127
<b>Exercise 3. Working with Built-In Effects .....</b>	<b>129</b>
<b>Chapter 5. TDM Plug-Ins and VENUE .....</b>	<b>135</b>
Introduction.....	137
TDM Plug-In Background.....	137
Included Plug-Ins .....	138
Factory Installed Plug-Ins.....	138
VENUEPack SC48 .....	138
VENUEPack Plug-Ins.....	138
VENUEPack Pro Plug-Ins.....	138
Installing Plug-Ins.....	139
Using Plug-In Installers .....	139
Enabling and Disabling Installed Plug-Ins .....	141
Plug-In Rack Overview.....	141
Views and Controls .....	143
Rack Views.....	143
Rack Slot Controls .....	144
Display of Unavailable or Inactive Plug-Ins .....	146
Assigning and Routing Plug-Ins .....	146

Assigning Plug-Ins to Rack Slots .....	146
Plug-In Formats .....	147
Initializing the Plug-In Racks .....	148
Routing Channels to Plug-Ins .....	148
Using Plug-Ins as Channel Inserts .....	148
Using Plug-Ins as Bus Processors .....	149
Controlling and Adjusting Plug-In Parameters .....	150
Using the On-Screen Controls .....	151
“Jump To” Plug-Ins .....	151
Plug-Ins Display and Channel Selection .....	152
Pinning a Plug-In View .....	152
Adjusting Plug-Ins from the ACS (EQ and Dynamics) .....	152
Adjusting EQ Plug-Ins .....	153
Other EQ Considerations .....	153
Adjusting Dynamics .....	153
Other Dynamics Considerations .....	154
Adjusting Plug-Ins from the Output Encoders .....	154
Plug-In Presets .....	155
Plug-Ins and VENUE Standalone Software .....	158
Review/Discussion .....	159
<b>Exercise 4. Working with TDM Plug-Ins .....</b>	<b>161</b>
<b>Chapter 6. Mixing with VENUE .....</b>	<b>169</b>
Introduction .....	171
Configuring Busses for Mixing .....	171
Main Bus Configuration .....	171
Center Divergence for L-C-R Applications .....	172
Choosing Aux/Group Bus Configuration .....	172
Using Groups .....	174
Assigning Inputs to Groups .....	174
Viewing Group Bus Assignments .....	176
Routing Groups to the Main Busses or Other Outputs .....	177
Routing Group Outputs to the Main Busses .....	177
Routing Groups to Hardware Outputs .....	178
Using Aux Busses .....	180
Using Auxes for Monitor Mixes .....	180
Routing Aux Bus Direct Outputs .....	180
Direct Output Pickoff Points .....	182
Global Pre/Post Fader Pickoff Point .....	183
Using Mute Groups .....	183
Defining Mute Groups .....	183
Viewing Members of Mute Groups .....	184
Activating Mute Groups .....	184
Mute Groups and Explicit Mutes .....	185
Disabling Mute Groups .....	185
Talkback, 2-Track, and Oscillator Controls .....	186
Using Talkback .....	186
Routing Talkback to an Input Channel .....	186
Routing Talkback Directly to an Output .....	187
Using 2-Track Inputs and Outputs .....	189
Routing Oscillator Output .....	192
Adjusting Oscillator Parameters from the Control Surface (D-Show and Profile Only) .....	193
Review/Discussion .....	194
<b>Exercise 5. Mixing with the Console .....</b>	<b>197</b>

<b>Chapter 7. Matrix Mixers .....</b>	<b>203</b>
Introduction.....	205
Matrix/PQ Mixer Overview .....	205
Matrix/PQ Input Sources .....	206
User Inputs.....	207
Configuring User Inputs .....	207
Adding User Inputs to a Matrix or PQ Mixer .....	208
Working with Matrix Input Channels .....	209
Routing Matrix/PQ Inputs .....	209
Assigning Sources to an Individual Matrix or PQ Mixer.....	209
Assigning Sources to Multiple Mixers at Once.....	210
Enabling Input Channels .....	210
Enabling Inputs and Setting Levels on a Single Mixer .....	211
Enabling Inputs and Setting Levels on Multiple Mixers at Once .....	211
Copying, Resetting, and Clearing Matrix/PQ Mixes .....	212
Copying a Matrix/PQ Mixer .....	212
Clearing Matrix/PQ Mixer Properties.....	213
Matrix Outputs .....	213
Routing Matrix Outputs.....	214
Adjusting Matrix and PQ Mixer Output Levels.....	214
Additional Matrix and PQ Output Controls .....	215
Delay Compensation with Matrix and PQ Mixers .....	218
Review/Discussion .....	220
<b>Chapter 8. VENUE FWx and Pro Tools.....</b>	<b>223</b>
Introduction.....	225
Overview of the VENUE-to-Pro Tools Connection .....	225
System Configuration Options .....	225
Connecting to Pro Tools .....	226
Interface Options .....	227
Verifying Card Installation.....	227
Using VENUE FWx with Pro Tools.....	227
FWx Capabilities.....	228
Connecting the FWx Card to Pro Tools .....	228
Using VENUE Link.....	229
Establishing an Ethernet Connection.....	229
Connections Requiring Manual IP Address .....	230
Connecting Using a Router with DHCP .....	232
Enabling VENUE Link.....	235
Recording a Show to Pro Tools.....	236
Configuring VENUE Outputs.....	237
Routing Discrete Channels into Pro Tools.....	237
Routing the VENUE Main Mix or a Submix into Pro Tools.....	239
Creating a Pro Tools Session from VENUE (using FWx) .....	240
Verifying Track Inputs and Record-Enabling Pro Tools .....	242
Recording in Pro Tools .....	243
Playing Back Tracks from Pro Tools.....	244
Routing FWx Connections for Supplemental Playback.....	244
Routing FWx Connections for Virtual Soundcheck.....	245
Configuring Pro Tools for Playback through VENUE .....	246
Review/Discussion .....	248
<b>Exercise 6. Using Pro Tools for Virtual Soundcheck with FWx .....</b>	<b>251</b>

<b>Appendix A. D-Show Differences.....</b>	<b>257</b>
Input Controls.....	259
Direct Outputs.....	259
Output Controls.....	260
Assignable Output Encoders .....	260
Output Encoder Function Switches .....	261
Output Encoder Controls.....	261
Matrix and PQ Sends.....	262
Assignable Output Faders.....	263